

To select the trip time/air temperature gauge display, current fuel mileage/average fuel mileage/average speed/subtraction trip/amount of remaining fuel/available driving distance display and odometer/tripmeter display, press the **SET** button first, then the **▲** (up) button or the **▼** (down) button.

Press the **SET** button. The selected display is set.

**Trip time [ELAPSED]/Air temperature gauge [AIR] display** **➡P.30**

**Current fuel mileage [CONS.]/Average fuel mileage [AVG. CONS.]/Average speed [AVG. SPD.]/Subtraction trip [-TRIP]/Amount of remaining fuel/Available driving distance display** **➡P.31**

**Odometer [TOTAL] & Tripmeter [TRIP A/B] display** **➡P.36**

