

Ignition Switch

Switches the electrical system on/off, locks the steering.

u Key can be removed when in the OFF or LOCK position.

Steering Lock: ➔ P.52

Rear ABS switch


Switches the ABS function on the rear wheel on/off. ➔ P.53

G switch

Switches the G switch on/off. ➔ P.54

Engine stop switch/ Start button

Should normally remain in the  (Run) position.

u In an emergency, switch to the  (Off) position to stop the engine.

A/M Switch

To shift between the AT MODE and MT MODE. ➔ P.66

Hazard switch

Switchable when the ignition switch is turned to the ON position. Can be turned to off regardless of the ignition switch position.

u The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on