


## Front Seat

### Removal

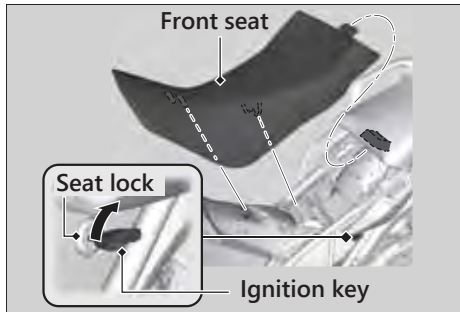

1. Insert the ignition key into the seat lock, and turn and hold the key clockwise to unlock the front seat.
2. Remove the front seat while pulling it forward and upward.

### Installation

1. **When setting the high seat position:**  
Insert the rear prong into the rear upper slot on the rear carrier.

