

## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 85

### Fuse Box Fuses

1. Remove the front seat. 2 P. 98
2. Open the fuse box covers.
3. Pull the fuses out with the fuse puller in the tool kit one by one check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
4. Close the fuse box covers.
5. Reinstall the front seat.

CRF1000A

