

Average fuel mileage

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value displayed on the tripmeter (A or B) selected. Also, the average fuel mileage for tripmeter A will be displayed when the odometer is selected.

AC, II AC, III AC, IV AC type

Display range: 0.0 to 300.0 mpg (mile/L, km/L or L/100km)

- Initial display: "----.-" is displayed.
- More than 300.0 mpg (mile/L or L/100km): "----.-" is displayed.
More than 300.0 km/L: "300.0" is displayed.
- When the tripmeter A or B is reset: "----.-" is displayed.

CM, II CM, III CM, IV CM type

Display range: 0.0 to 300.0 L/100km (km/L, mpg or mile/L)

- Initial display: "----.-" is displayed.
- More than 300.0 L/100km (mpg or mile/L): "----.-" is displayed.
More than 300.0 km/L: "300.0" is displayed.
- When the tripmeter A or B is reset: "----.-" is displayed.

When "----.-" is displayed except for the above-mentioned cases, go to your dealer for service.

To reset the average fuel mileage:

➡ P.29