

Riding mode *(Continued)*

Setting the riding mode

You can change the P and EB values and Torque Control level on the USER of the riding mode.

- 1 Stop the motorcycle.
- 2 Select the USER in the riding mode you want to set. **➡P.67**
- 3 Press and hold the **MODE** button until P value is selected.
- 4 Press the **SEL ▲** (up) or **SEL ▼** (down) button until the desired value is displayed.
- 5 Press the **MODE** button until EB value is selected.
- 6 Press the **SEL ▲** (up) or **SEL ▼** (down) button until the desired value is displayed.
- 7 Press the **MODE** button until Torque Control level is selected.

- 8 Press the **SEL ▲** (up) or **SEL ▼** (down) button until the desired value is displayed.
 - ▶ T value can be changed to level 0 by pressing and holding the **SEL ▼** (down) button at the time of level 1 or pressing and holding the Torque Control switch.
- 9 Press and hold the **MODE** button until ordinary display is displayed

You can stop setting the riding modes at any time by pressing and holding the **MODE** button.