


## Instruments (Continued)

3 If you select to [OFF] (manual) push the ◀ or ▶ of the ◀▶ sel left/right switch to select your preferred level.

- ▶ Push and hold the ◀ or ▶ of the ◀▶ sel left/right switch to advance the figure fast.

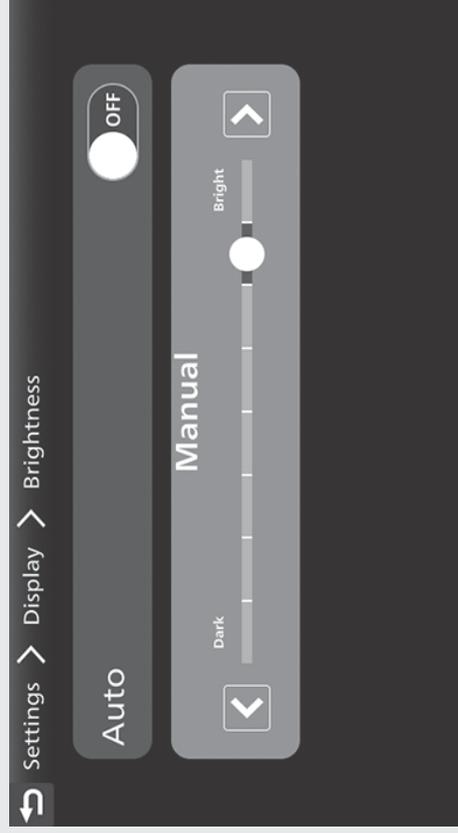

4 Return to the riding information, previous screen or Home screen. **▶P.38**  
You can also perform the above settings by using the touch screen.

**Setting range:** Level 1 to 8 or [Auto]  
**Default:** [Auto]

## Background

You can select the background.

### Automatic Background Control:

**▶P.324**

