


Instruments (Continued)

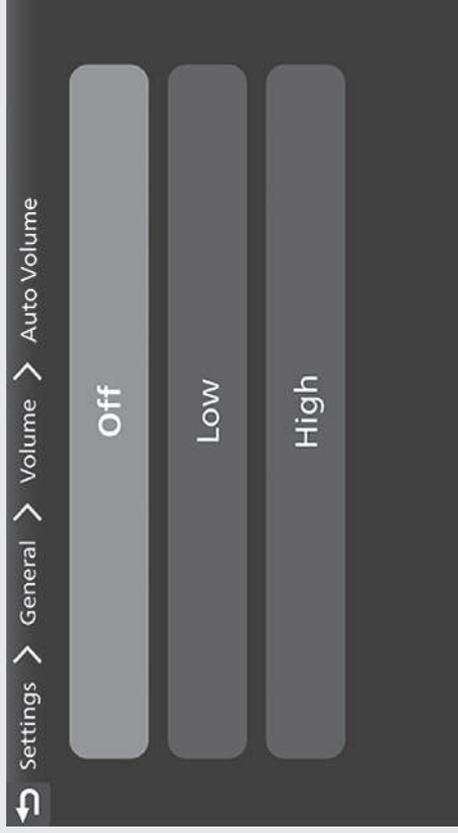

- 4 Return to the riding information, previous screen or Home screen. **➔P.38**
You can also perform the above settings by using the touch screen.

Available settings: [Off] (disable)/[Low]/[High]

Default: [Off] (disable)

To adjust the volume:

- 1 Select [Volume], and then press the **ENT** switch.
- 2 Press the **▲** sel up switch or **▼** sel down switch to select a setting menu.
- 3 Push the **◀** or **▶** of the **◀▶** sel left/right switch to select your preferred level.
 - ▲ Push and hold the **◀** or **▶** of the **◀▶** sel left/right switch to advance the figure fast.

