

Taking Care of the Unexpected


The fuse is located under the seat.

Recommended Fuse

main fuse	10 A
-----------	------

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuse.
2. For access the main fuse (1), remove the seat ([page 56](#)).
3. Remove the starter magnetic switch (2) from the rear fender (3).
4. Disconnect the wire connector (4) of the starter magnetic switch.
5. Pull the fuse out. If the main fuse is blown (5), install a new main fuse (6).
6. Reconnect the wire connector.
7. Install the starter magnetic switch.
8. Install the seat.

UNDER SEAT

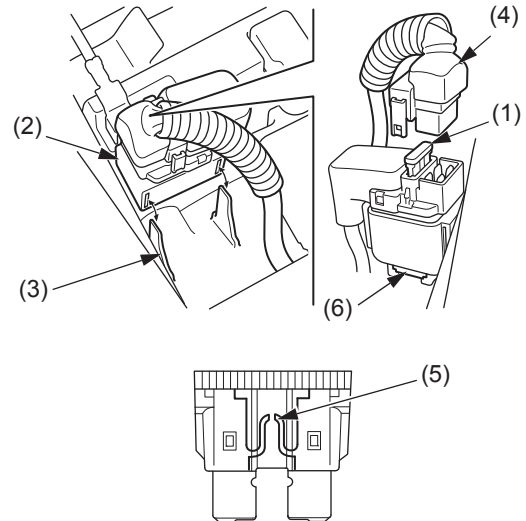

- | | |
|-----------------------------|---------------------|
| (1) main fuse | (4) wire connector |
| (2) starter magnetic switch | (5) blown fuse |
| (3) rear fender | (6) spare main fuse |