Is Your Motorcycle Ready to Ride?

Engine Oil	Check the level and add oil if needed (page 65).	Cables	Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as
Fuel	Check the level and add fuel (page 60) if needed. Also make		needed.
	sure the fuel fill cap is securely fastened.	Nuts & Bolts	Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight.
Drive Chain	Check the condition and slack. Adjust and lubricate if needed. Also check the chain guide slider and slipper for wear and replace if needed (page 105).	Spark Plug & Cap	Check for looseness (page 79).