

Maintenance Schedule

Items	Frequency	Which ever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:
			mi	600	1,200	1,800	2,400	
			km	1,000	2,000	3,000	4,000	
Note	Month	1	6	12	18	24		
Drive Chain	Note 1		I, L	I, L: every 300 mi (500 km) or 3 months				105
Drive Chain Slider				I	I	I	I	106
Brake Fluid	Note 2			I	I	I	I	87
Brake Shoes/Pads Wear				I	I	I	I	89, 92
Brake System			I	I	I	I	I	86
Clutch System			I	I	I	I	I	75
Side Stand					I		I	104
* Suspension					I		I	83
* Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours					81
* Nuts, Bolts, Fasteners			I		I		I	-
** Wheels/Tires			I	I	I	I	I	94, 100
** Steering Head Bearings			I		I		I	-

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 162).

** In the interest of safety, we recommend these items be serviced only by your dealer.