


Cleaning

RIGHT SIDE

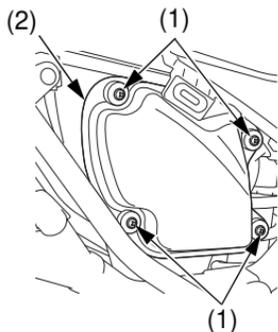


(1) screws

(2) air cleaner housing cover

1. Remove the right side cover (page 53).
2. Remove the screws (1) and air cleaner housing cover (2).

RIGHT SIDE

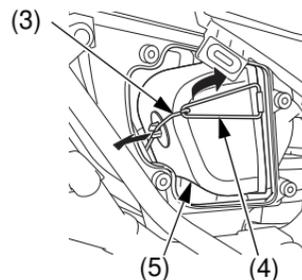

(3) set spring

(4) set spring holder

(5) air cleaner

3. Unhook the set spring (3), take care to avoid bending the set spring and set spring holder (4).
4. Remove the air cleaner (5).

(cont'd)