

Indicators


If one of these indicators does not come on when it should, have your dealer check for problems.

Rear ABS (Anti-lock Brake System) OFF indicator

MA type

Comes on briefly when the ignition switch is turned to the **I** (On) position.

Comes on when the ABS function on the rear wheel is turned off.

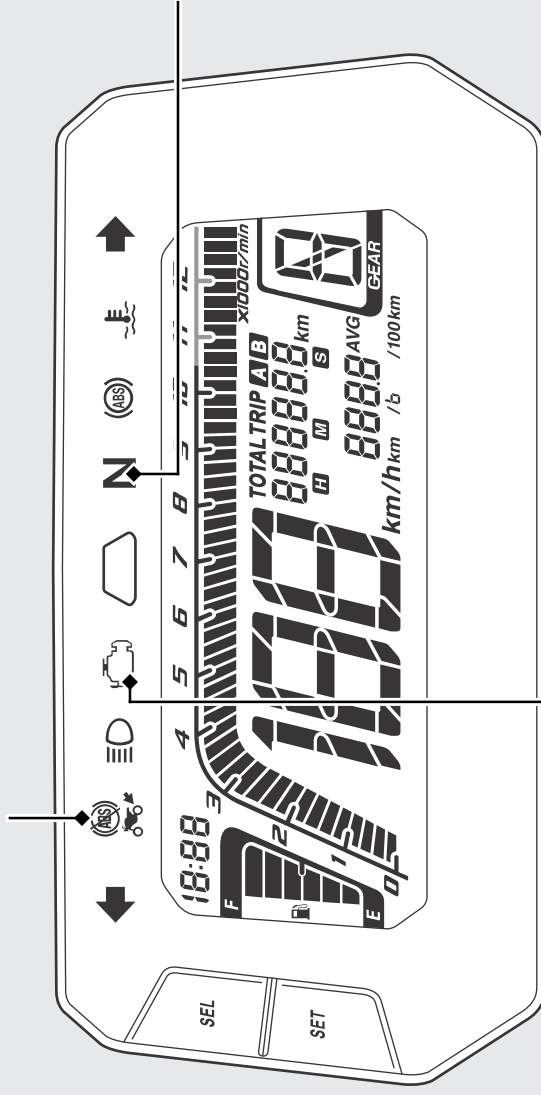

N Neutral indicator

Comes on when the transmission is in Neutral.

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned to the **I** (On) position with the engine stop switch in the **Q** (Run) position.

If it comes on while engine is running:  **P.93**