

Fuel System

Refer to [Safety Precautions](#) on page 23.

Fuel

Type	Unleaded
Pump Octane Number	91 (or higher)

Use only unleaded fuel in your Honda. If you ride your Honda in a country where leaded fuel might be available, take precautions to use only unleaded fuel.

Your engine is designed to use any unleaded gasoline that has a pump octane number of 91 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see [page 153](#).

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a louder rapping noise) which, if severe, can lead to engine damage. (Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.)


If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your dealer.

Never use stale or contaminated gasoline. Avoid getting dirt, dust or water in the fuel tank.

Dirty fuel will clog the fuel pump filter and can damage the fuel pump. Commercially available fuel straining devices may reduce the occurrence of dirty fuel.

Refueling Procedure

1. To open the fuel fill cap (1), pull the breather tube (2) out of the steering stem nut (3). Turn the fuel fill cap counterclockwise and remove it.

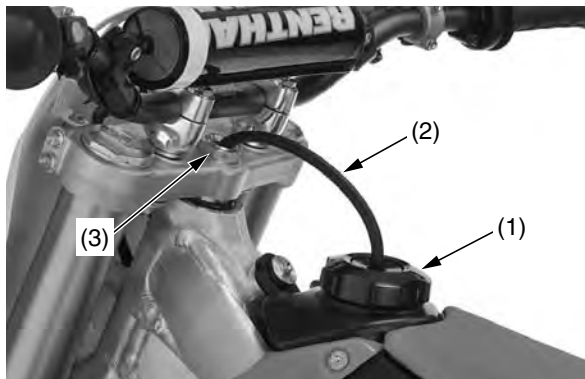

(1) fuel fill cap (3) steering stem nut
(2) breather tube

2. Add fuel until the level reaches the bottom of the filler neck.

Fuel Tank Capacity: 1.5 US gal (5.7 ℓ)
Be careful not to damage the fuel pump while filling the fuel tank.

Avoid overfilling the tank. There should be no fuel in the filler neck.

⚠ WARNING


Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

3. Close the fuel fill cap and insert the breather tube in the steering stem nut.

Fuel Line

1. Hang the fuel tank to the left side of the frame ([page 34](#)).
2. Remove the fuel quick connect fitting cover (1).
3. Check the fuel line (2) for cracks, deterioration, damage or leakage. Replace the fuel line, if necessary.
4. Install the fuel quick connect fitting cover.
5. Install the fuel tank ([page 35](#)).

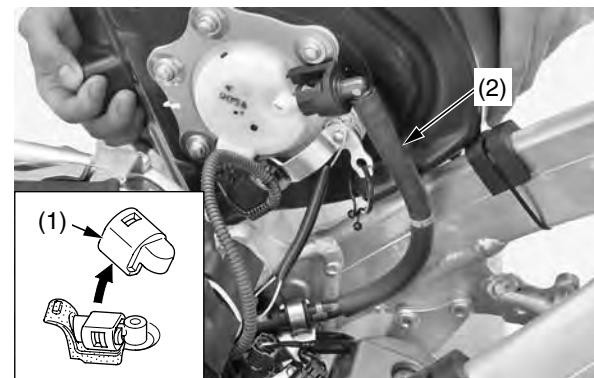

(1) fuel quick connect fitting cover
(2) fuel line