


- 9. Check for interference between the frame and tank, and check the cushion rubbers (17) on both sides of the frame for hardening or cracks.

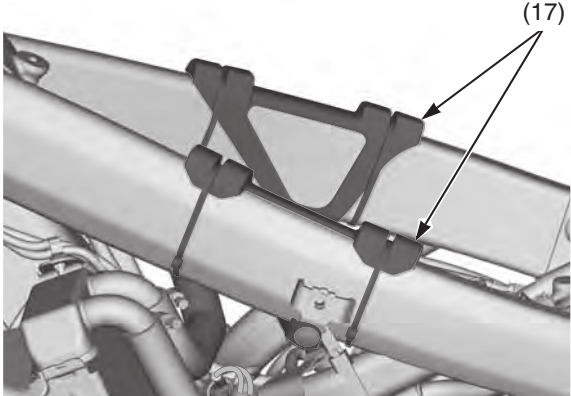


(17) cushion rubbers

NOTICE

*Do not ride your CRF in state which the cushion rubbers have been removed.
It may cause the fuel tank cracking.*


Installation

- 1. Install the fuel tank (1) on the frame.
- 2. Install the washers (2), fuel tank A bolt (3) and B bolts (4), and then tighten the fuel tank A bolt and B bolts to the specified torque:
7 lbf-ft (10 N-m, 1.0 kgf-m)

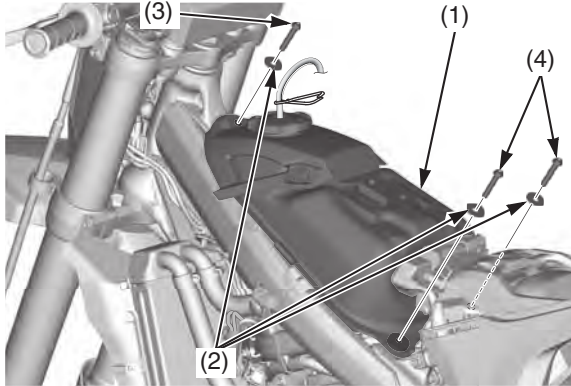


(1) fuel tank
(2) washers
(3) fuel tank A bolt
(4) fuel tank B bolts

- 3. Put the breather tube (5) in the steering stem nut (6).
- 4. Remove the hose clamp (7) from the breather tube.

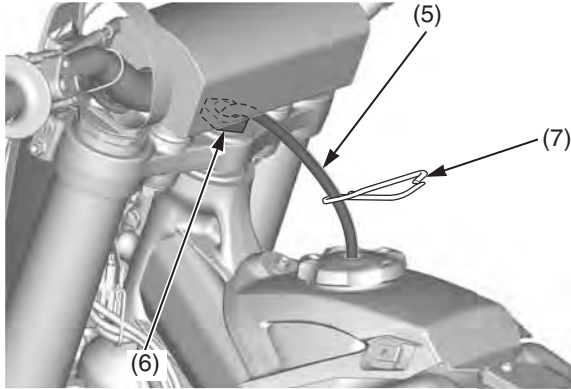

(5) breather tube
(6) steering stem nut
(7) hose clamp

- 5. Connect the overflow hose (8) to the clamp (9).

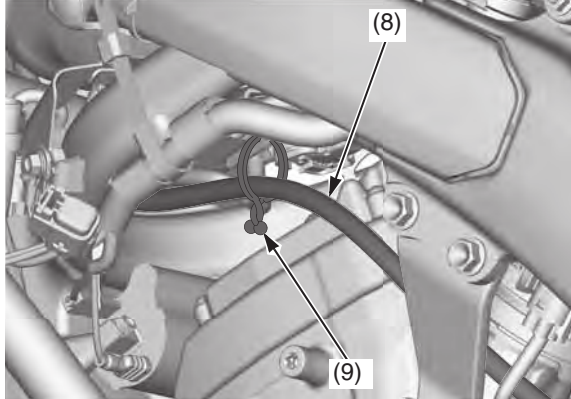

(8) overflow hose
(9) clamp

(cont'd)