

# Indicators & Displays


1	SEL button	Uses this button for the following purposes. <ul style="list-style-type: none"> <li>• To change the 12/24 hour</li> <li>• To adjust time</li> <li>• To adjust display illumination</li> <li>• To select and reset the fuel mileage meter</li> <li>• To change the mileage units for the odometer/tripmeter and available driving distance</li> <li>• To select and reset the tripmeter</li> </ul>
2	High coolant temperature indicator	Lights when the coolant is over the specified temperature. If the indicator comes on, pull safely to the side of the road. See page 170. <i>Lamp Check.</i>
3	PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and the engine stop switch is at  (Run) position. If the indicator comes on at any other time, reduce speed and take your motorcycle to your dealer as soon as possible. <i>Lamp Check.</i>
4	Turn signal indicator	Flashes when either turn signal operates.
5	Multi-function display	The display includes the following functions. <i>Display check.</i>
	Speedometer	Shows riding speed in miles or kilometers per hour (page 12).
	Digital clock	Shows hour and minute (page 13).
	Odometer	Shows accumulated mileage (page 12).
	Tripmeter A & B	Shows the number of miles or kilometers ridden since you last reset the meter (page 12).
	Fuel mileage meter	Shows current fuel mileage, average fuel mileage, or fuel consumption (page 12).
6	Fuel reserve indicator	When this indicator comes on while riding, fuel reserved in the tank is about: 0.58 US gal (2.2 l) <i>Lamp Check.</i>
7	Neutral indicator	Lights when the transmission is in neutral.
8	High beam indicator	Lights when the headlight is on high beam.

## Multi-function Display

The multi-function display includes the following functions:

- speedometer
- odometer
- tripmeter A & B
- fuel mileage meter
- digital clock

The digital clock will reset if the battery is disconnected.

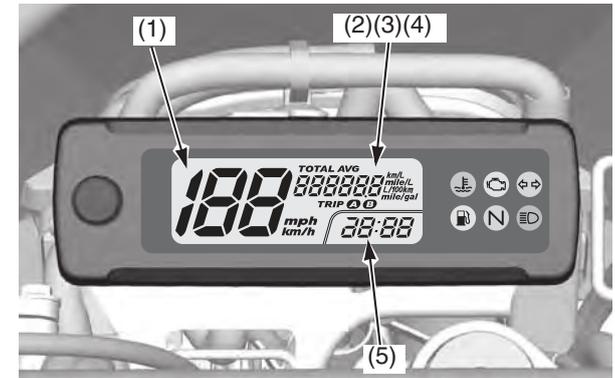

- (1) speedometer
- (2) odometer
- (3) tripmeter
- (4) fuel mileage meter
- (5) digital clock