


# Seat

Refer to *Important Safety Precautions* on page 33.

## Removal


1. Remove the seat mounting bolts (1).
2. Remove the seat (2) by pulling it backward.

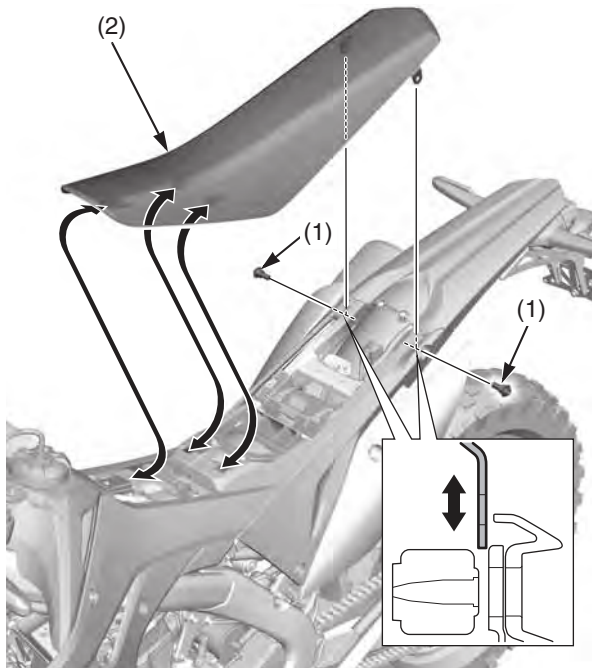

(1) seat mounting bolts      (2) seat

## Installation

1. Install the seat while aligning the seat front prong (1) with the slot (2) of the fuel tank and seat center prongs (3) with the seat support base slots (4).
2. Install and tighten the seat mounting bolts (5) to the specified torque:  
19 lbf-ft (26 N-m, 2.7 kgf-m)

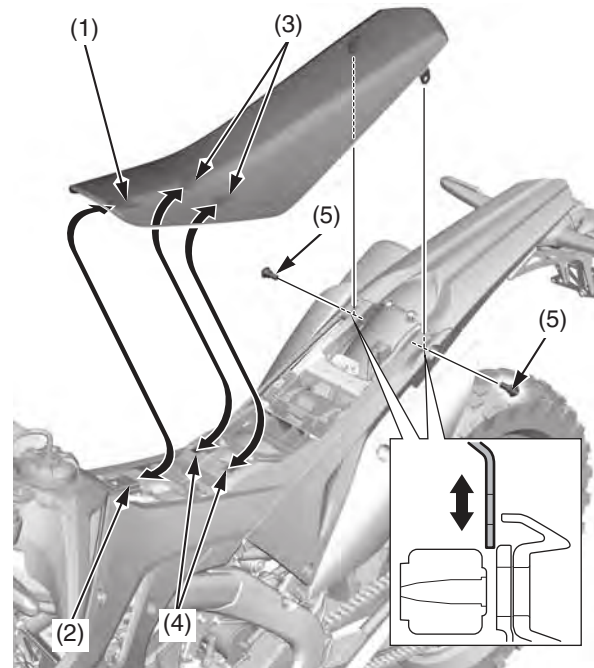

(1) seat front prong      (4) seat support base slots  
(2) slot      (5) seat mounting bolts  
(3) seat center prongs