


Fuel Tank

Refer to *Important Safety Precautions* on page 33.

Removal


1. Remove the seat (page 46).
2. Remove the shroud A bolt (1), shroud B bolt (2) and shroud C bolt (3).
3. Slide the shroud (4) toward the up to separate them from the side cover (5), and then remove the shroud.

The right and left shrouds can be removed in the same manner.

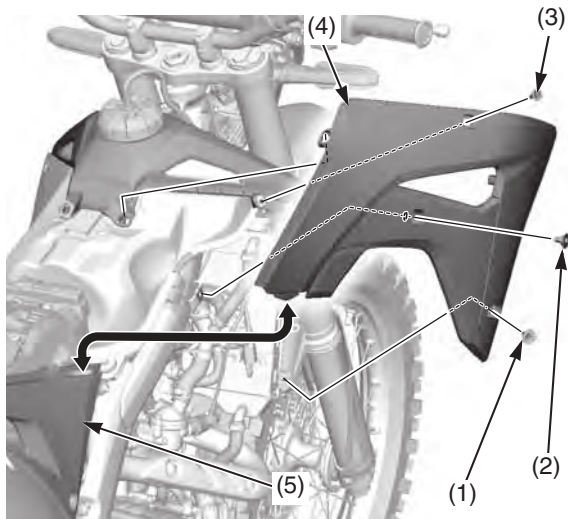


- (1) shroud A bolt
- (2) shroud B bolt
- (3) shroud C bolt
- (4) shroud
- (5) side cover

4. Release the breather tube (6) from the tube guide (7) on the top shelter (8).
5. Disconnect the breather tube (6) at the tube joint (9).

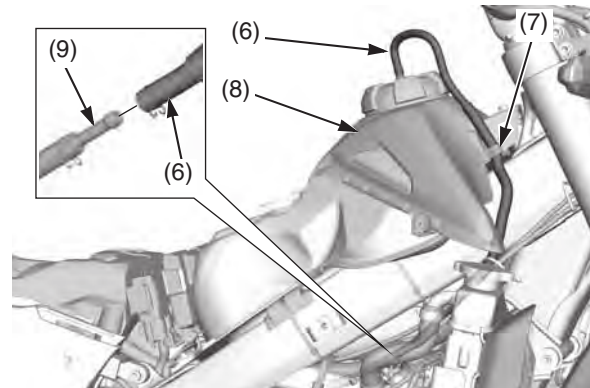

- (6) breather tube
- (7) tube guide
- (8) top shelter
- (9) tube joint

6. Remove the fuel tank bolts (10) and washers (11).

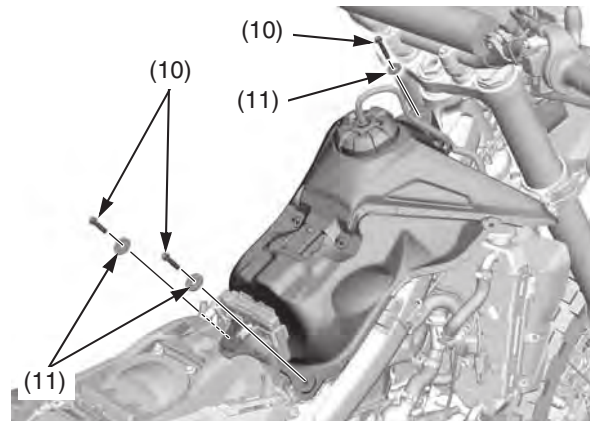

- (10) fuel tank bolts
- (11) washers

7. Lift the fuel tank (12) out of the frame to the left of the frame.

Do not support the fuel tank by the fuel feed hose (13).

NOTICE


The fuel tank is made of titanium material. Since the fuel tank has not been painted, it might be discolored with mud and dust. To remove mud or dust, use a sponge or soft cloth and a stainless steel kitchen detergent, then rinse well clean water. After washing, rinse with plenty of water and dry with a clean cloth.

⚠ WARNING

Gasoline is highly flammable and explosive.

You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

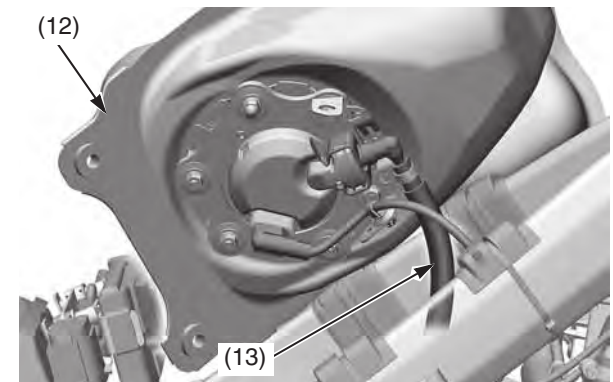

- (12) fuel tank
- (13) fuel feed hose