

Controls & Features

Start Button



The start button is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, [page 56](#).

When the start button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

The starter motor will not operate if the engine stop switch is in the OFF position when the start button is pushed.

Cruise Control Switches

Three switches are used to activate, adjust, and de-activate the cruise control system: a CRUISE CONTROL master switch, a SET/DECEL switch, and a RESUME/ACCEL switch. For operating instructions, see *Riding with Cruise Control*, [page 69](#).