

## Braking

---

If the ABS indicator light blinks while riding, stop the motorcycle in a safe place and turn off the engine. Turn the ignition ON again. The light should come on, and then go off after starting to ride. If it does not go off or if it blinks again, ABS is not functioning.

However, Dual CBS (Linked Braking System) will still provide normal stopping ability, but you should have the ABS system checked by your dealer as soon as possible.

The ABS indicator may blink if you place the motorcycle on a maintenance stand and turn the rear wheel. This is normal. Turn the ignition OFF to stop the blinking.

An amber LED is used for the ABS indicator light. Be sure that the LED lights when the ignition is ON. If the LED fails to light, see your dealer.