

## Maintenance Schedule

Items		Frequency*1								Refer to page	
		x 1,000 mi	0.6	2.5	5	7.5	10	12.5	15		
		x 1,000 km	1	4	8	12	16	20	24		
Emission-Related Items	FUEL LINE 			I	I	I	I	I	I	-	
	THROTTLE OPERATION 			I	I	I	I	I	I	71	
	AIR CLEANER *2							R		49, 60	
	CRANKCASE BREATHER *3			C	C	C	C	C	C	72	
	SPARK PLUG			I	R	I	R	I	R	55	
	VALVE CLEARANCE 		I	I	I	I	I	I	I	-	
	ENGINE OIL		Initial = 600 mi (1,000 km) or 1 month: <b>R</b> Regular = Every 2,500 mi (4,000 km) or 6 months: <b>R</b>							58	
	ENGINE OIL STRAINER SCREEN 						C			C	-
	ENGINE OIL CENTERIFUGAL FILTER 						C			C	-
	ENGINE IDLE SPEED 		I	I	I	I	I	I	I	-	
EVAPORATIVE EMISSION CONTROL SYSTEM 						I			I	-	

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➔ P. 106).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.