

Troubleshooting

Engine Will Not Start	P. 75
Warning Indicators On or Flashing	P. 76
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 76
Other Warning Indication	P. 77
Fuel Gauge Failure Indication	P. 77
Tire Puncture	P. 78
Electrical Trouble	P. 84
Battery Goes Dead.....	P. 84
Burned-out Light Bulb	P. 84
Blown Fuse.....	P. 87

Unstable Engine Operation Occurs Intermittently	P. 88
--	-------