

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ▣ P. 29
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence ▣ P. 29
 - Make sure engine stop switch is in  (Run) position ▣ P. 26
 - Check for a blown fuse ▣ P. 87
 - Check for a loose battery connection or battery terminal corrosion ▣ P. 44, 53
 - Check the condition of the battery ▣ P. 84
- If the problem continues, have your motorcycle inspected by your dealer.