

Items		Frequency*1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line	↗			I		I		I		–
	Throttle Operation	↗			I		I		I		124
	Air Cleaner*2					R			R		96
	Crankcase Breather*3			C	C	C	C	C	C		126
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								102
	Valve Clearance	↗					I				–
	Engine Oil		R		R		R		R	1 Year	107
	Engine Oil Filter		R				R				107
	Clutch Oil Filter*6		R				R				109
	Engine Idle Speed	↗			I		I		I		–
	Radiator Coolant*7				I		I		I	3 Years	111
	Cooling System	↗			I		I		I		–
Evaporative Emission Control System*4	↗					I				–	

**Maintenance Level**

↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (➡ P. 168).

↘ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

**Maintenance Legend**

I : Inspect (clean, adjust, lubricate, or replace if necessary)

R : Replace

L : Lubricate

C : Clean