


### Fuses

Fuses protect the electrical circuits on your scooter. If something electrical on your scooter stops working, check for and replace any blown fuses. ➤ P. 97

#### Inspecting and Replacing Fuses

Turn the ignition switch to the OFF position to remove and inspect fuses. If a fuse is blown, replace with a fuse of the same rating. For fuse ratings, see "Specifications." ➤ P. 121

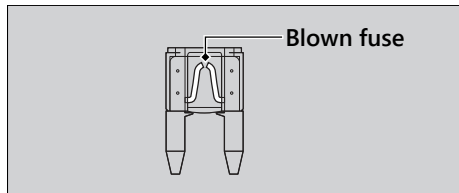

#### NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If a fuse fails repeatedly, you likely have an electrical fault. Have your scooter inspected by your dealer.