



10. Install the oil strainer screen, spring and oil plug and tighten.

**Torque:** 15 lbf-ft (20 N·m, 2.0 kgf·m)

11. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 18 lbf-ft (24 N·m, 2.4 kgf·m)

12. Fill the crankcase with the recommended oil (► P. 57, ► P. 121) and install the oil fill cap/dipstick.

#### Required oil

##### When changing oil & cleaning the strainer screen:

0.69 US qt (0.65 L)

##### When changing oil only:

0.69 US qt (0.65 L)

13. Check the oil level. ► P. 71
14. Check that there are no oil leaks.