# Instruments, Controls, & Other Features

#### **Ignition Switch**

Leaving the ignition switch in the ON position with the engine stopped will drain the battery.

Do not turn the key while riding.

# **Engine Stop Switch**

Do not use the engine stop switch except in an emergency. Doing so when riding will cause the engine to suddenly turn off, making riding unsafe.

If you stop the engine using the engine stop switch, turn the ignition switch to the OFF position. Failing to do so will drain the battery.

# Odometer

The display locks at 999,999 when the read-out exceeds 999,999.

#### Tripmeter

The tripmeter returns to 0.0 when the read-out exceeds 999.9.

### **Document Bag**

The owner's manual, registration, and insurance information can be stored in the plastic document bag located in the center compartment.