
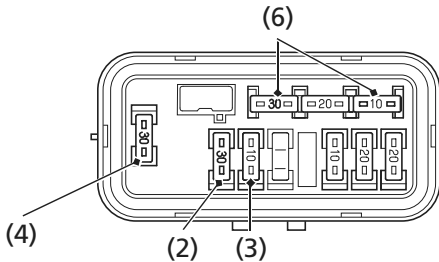


If a Fuse Blows

Main and Shift Motor Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (O) before checking or replacing the fuses.
2. Remove the seat ([page 118](#)).
3. Remove the rear fender cover ([page 121](#)).
4. To access the main fuses (2) (3) and shift motor fuse (4), remove the fuse box cover (5).

UNDER REAR FENDER COVER

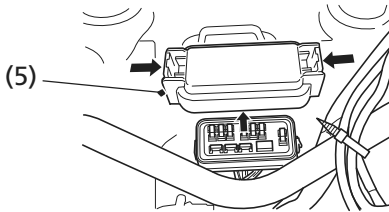

(2) main fuse 1

(3) main fuse 2

(4) shift motor fuse

(5) fuse box cover

(6) spare fuses

5. Pull the main fuse out.

If it is blown, install the spare fuses (6).

(cont'd)