

# Shifting Gears

---


## Drive mode select (AUTO/ESP)

The drive mode select switch (1) is located on the right handlebar. To select the drive mode, release the throttle, then slide the drive mode select switch to the desired position. With the throttle fully closed, the drive mode can be changed while riding.

### RIGHT HANDLEBAR

AUTO (automatic shift mode)

ESP (manual shift mode)

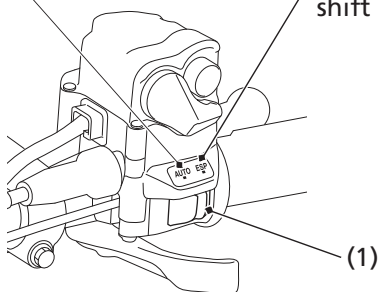

(1) drive mode select switch

## Gear Position selection AUTO (D/N/R), Manual (1-5/N/R)

Two gearshift switches are located next to the left handlebar grip: upshift (⬆) and downshift (⬇).

To shift between a forward gear (D or 1), neutral (N), or reverse (R), bring the ATV to complete stop, and press a shift switch to select gear position.

Select neutral (N) when you start the engine, or if it is necessary to stop briefly with the engine idling.

The gear position indicator shows "N".