

# Indicators & Displays

|   |  |   |
|---|--|---|
| 1 | RESET button                           | Resets the tripmeter to zero (0) (page 23 ).<br>This button also used to reset the oil change indicator (page 22 ).   |
| 2 | Odometer/tripmeter select button       | Selects display of the odometer or tripmeter A or tripmeter B (page 23 ).<br>This button also used to reset the oil change indicator (page 22 ).  |
| 3 | 4WD indicator                          | Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your dealer as soon as possible. <i>Lamp Check.</i>  |
| 4 | High oil/coolant temperature indicator | Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine.<br>If the high oil/coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 208. <i>Lamp Check.</i> |
| 5 | Neutral indicator                      | Lights when the transmission is in neutral. <i>Lamp Check.</i>  |
| 6 | Reverse indicator                      | Lights when the transmission is in reverse. <i>Lamp Check.</i>  |