

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
		NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS				I	I	187	
	FRONT/REAR FINAL GEAR OIL				(R: EVERY 2 YEARS)	I	136, 139	
*	BRAKE FLUID	NOTE 3			I	I	167	
*	BRAKE SHOES WEAR	NOTE 1, 2				I	175	
*	BRAKE PADS WEAR	NOTE 1, 2				I	170	
*	BRAKE LIGHT SWITCH			I	I	I	176	
	BRAKE SYSTEM			I	I	I	167	
*	REVERSE INHIBITOR SYSTEM			I	I	I	158	
	GUARDS				I	I	185	
*	CLUTCH SYSTEM			I	I	I	157	
*	SUSPENSION				I	I	164	
*	SPARK ARRESTER				C	C	163	
*	NUTS, BOLTS, FASTENERS			I		I	—	
**	WHEELS/TIRES			I	I	I	178	
**	TIE-ROD AND JOINT BOOTS			I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS					I	—	
**	STEERING SYSTEM					I	—	

- * Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual ([page 248](#)).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.