

Indicators & Displays

6	PS (Electric Power Steering) indicator (TRX500FM6/FM7)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 54 . <i>Lamp Check</i> .
7	Multi-function display	The display includes the following functions. <i>Display Check</i> .
	4WD indicator	Shows when the 4WD drive mode is engaged. If the indicator blinks with the differential lock indicator when there is any abnormality in the differential system. See page 38 .
	Gear position indicator	Shows the gear position (page 23).
	Maintenance minder indicator	Shows when specified maintenance interval is reached (page 32).
	Speedometer	Shows riding speed.
	Fuel gauge	Shows approximate fuel supply available (page 24).
	Digital clock	Shows the time (hours and minutes) (page 26).
	Odometer	Shows accumulated mileage (page 27).
	Tripmeter	Shows mileage per trip (page 27).
	Coolant temperature gauge	Shows approximate coolant temperature (page 28).
	Hourmeter	Shows hours and tenths of hours of engine operation (page 30).
	Maintenance tripmeter	Inform when the mileage or operating hours on your ATV approaches and passes the interval specified on the maintenance schedule (page 31).
Maintenance hourmeter		