


# Indicators & Displays

## Maintenance Tripmeter/Maintenance Hourmeter

The maintenance tripmeter (1) shows mileage to maintenance while the ignition switch is ON (I) with the maintenance minder indicator (2).

The maintenance hourmeter (3) shows remaining time to maintenance while the ignition switch is ON (I) with the maintenance minder indicator.

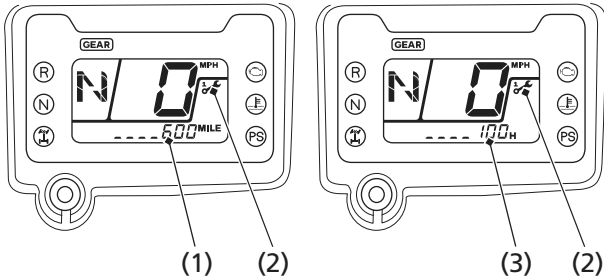

(1) maintenance tripmeter  
(2) maintenance minder  
indicator

(3) maintenance hourmeter

The maintenance tripmeter decreases from 600 miles (1,000 km) after reset. The maintenance hourmeter decreases from 100 hour after reset.

Initial setting of the maintenance tripmeter is 100 miles (150 km).  
Initial setting of the maintenance hourmeter is 20 hour.

(cont'd)