

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines ([page 233](#)).

| | |
|---|----|
| Safe Riding Precautions | 73 |
| Off-road Use Only..... | 73 |
| Keep Hands and Feet on Controls..... | 74 |
| Control Speed | 75 |
| Use Care on Unfamiliar or Rough Terrain | 76 |
| Do Not Perform Stunts..... | 77 |
| Starting & Stopping the Engine..... | 78 |
| Preparation..... | 78 |
| Starting Procedure | 79 |
| Flooded Engine..... | 80 |
| Bank Angle Sensor Ignition Cut-off System | 80 |
| Stalled Engine..... | 81 |
| How to Stop the Engine..... | 82 |
| Using the Recoil Starter (Canada only) | 83 |
| Shifting Gears..... | 84 |
| Riding in Reverse | 86 |

(cont'd)