


Coolant

To clean the radiator core and radiator grill plate:

1. Remove the radiator cap lid (page 142).
2. Remove the reserve tank (1) by removing the bolt (2) and clips (3) (page 123).
3. Release the hoses (4) from the guides.
4. Hold the reserve tank being careful not to spill the coolant.

LEFT FRONT

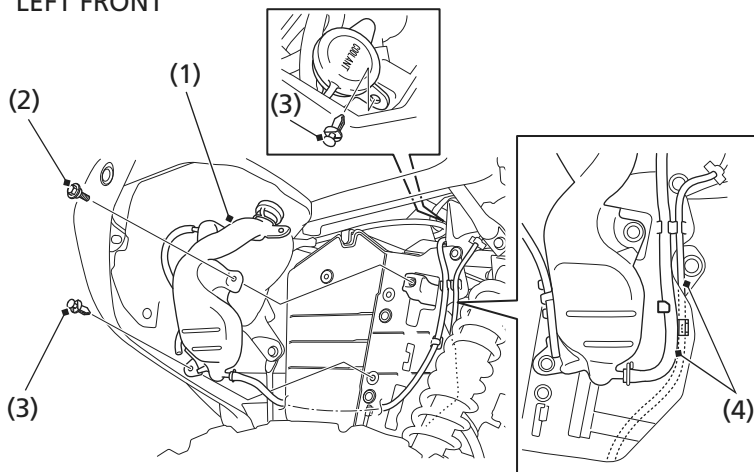

(1) reserve tank
(2) bolt

(3) clips
(4) hoses

(cont'd)