

If You Have a Flat Tire

Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 60 .


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Muffler Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the rear wheel off the ground by placing a support block under the engine.

3. Remove the right footpeg (1) by removing footpeg bolt A (2), B (3) and footpeg nut (4).

RIGHT SIDE

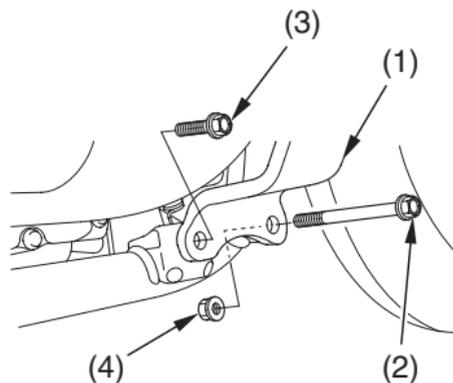

- | | |
|--------------------|--------------------|
| (1) right footpeg | (3) footpeg bolt B |
| (2) footpeg bolt A | (4) footpeg nut |