

## If You Have a Flat Tire

---

4. Reassemble the brake stopper arm.  
Tighten the stopper arm nut to the specified torque:  
**16 lbf·ft (22 N·m , 2.2 kgf·m)**
5. Connect the brake rod to the brake arm.
6. Install the rear brake adjusting nut.
7. Adjust the rear brake pedal freeplay (page 117 ).
8. Tighten the rear axle nut to the specified torque:  
**65 lbf·ft (88 N·m , 9.0 kgf·m)**
9. Tighten the axle holding bolt to the specified torque:  
**20 lbf·ft (27 N·m , 2.8 kgf·m)**
10. After installing the wheel, apply the brake several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.

Used cotter pins may not effectively secure fasteners. Always replace used cotter pins with new ones.