

- 10.** Check the condition of the sealing washer. on the drain bolt.
- ▶ Replace the washer every other time the oil is changed.
- 11.** Install the drain bolt and tighten.

Crankcase

**Torque:** 18 lbf·ft (24 N·m, 2.4 kgf·m)

Down tube

**Torque:** 29 lbf·ft (39 N·m, 4.0 kgf·m)

- 12.** Fill the oil tank with the recommended oil. (▶P.41)

### Required oil

#### When changing oil & engine oil filter:

2.06 US qt (1.95 liters)

#### When changing oil only:

2.0 US qt (1.9 liters)

- ▶ To fill the oil tank to the upper level, oil should be add two steps

- 13.** Pour the recommended oil into the oil tank, up to the UPPER level mark.
- 14.** Install the oil fill cap/dipstick securely.
- 15.** Start the engine. Let it idle 5 minutes. During idling, support your motorcycle in an upright position on a firm, level surface to assure an accurate oil level reading.
- 16.** Stop the engine. Remove the oil fill cap/ dipstick.
- 17.** Add the recommended oil up to the UPPER level mark. (Do not overfill.)
- 16.** Reinstall the oil fill cap/dipstick.

### NOTICE

Improper installation of the oil filter can result in serious damage to the engine.