


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is RUN  position. ➔ [P.20](#)
- Check the correct engine starting sequence. ➔ [P.22](#)
- Check that there is gasoline in the fuel tank.

Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse. ➔ [P.91](#)
- Check for a loose battery connection or battery terminal corrosion. ➔ [P.38](#)
- Check the condition of the battery. ➔ [P.88](#)

If the problem continues, have your motorcycle inspected by your dealer.