


BATTERY

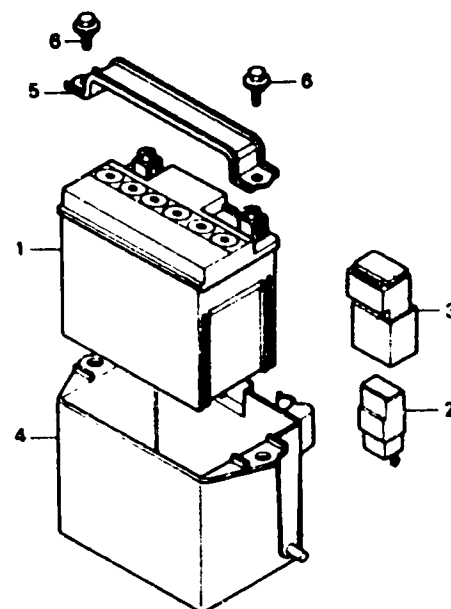


GZ44-F1400

EZ90 '91

Ref. No.	BLOCK NO. DESCRIPTION	F-14	FRAME SERIAL NUMBER		QTY REQ	PART NUMBER	HONDA CODE
			FROM	TO			
1	BATTERY (YUASA) (YT5L-BS)				1	31500-GE1-775	3202199
2	RELAY COMP., STARTER				1	38501-GN2-014	3030079
3	SUSPENSION, STARTER RELAY (MITSUBA)				1	38506-GC7-611	2870566
4	BOX, BATTERY				1	50325-GZ4-670	3449956
5	BAND, BATTERY				1	50326-GZ4-670	3449964
6	BOLT, FLANGE, 6X14				2	90111-HC4-000	2728558

AIR CLEANER

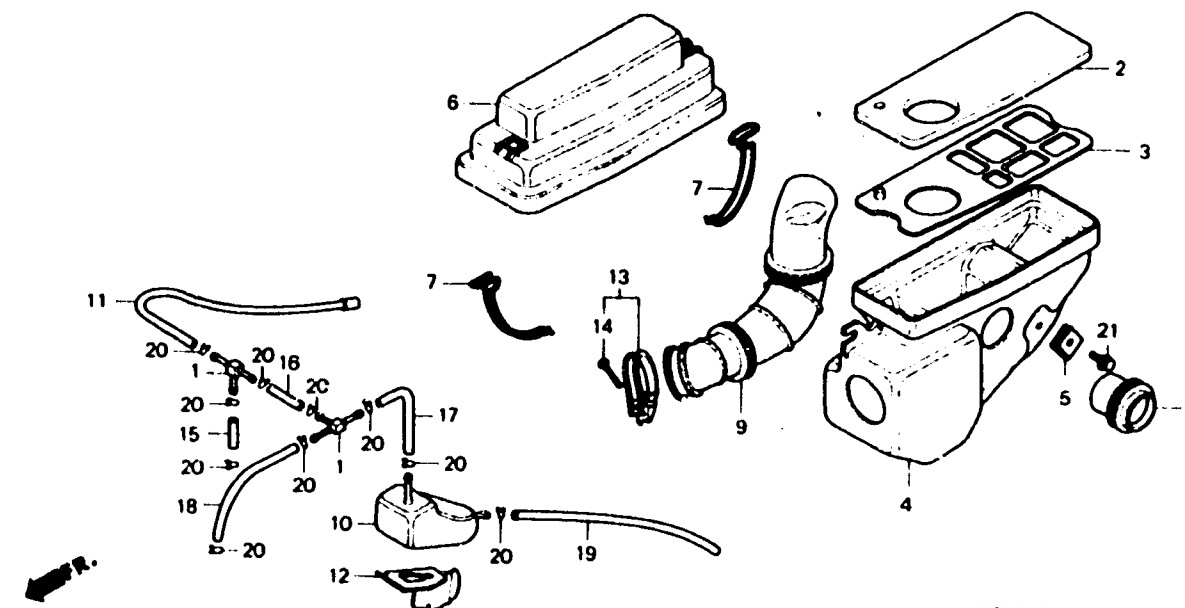

GZ44-F1500

"CAUTION OR WARNING LABELS MUST BE ORDERED SEPARATELY WHEN APPLICABLE"

EZ90 '91

Ref. No.	BLOCK NO. DESCRIPTION	F-15	FRAME SERIAL NUMBER		QTY REQ	PART NUMBER	HONDA CODE
			FROM	TO			
1	PIPE, THREE WAY JOINT				2	16960-ME9-000	1367564
2	ELEMENT, AIR CLEANER				1	17205-GZ4-670	3445624
3	BASE, ELEMENT				1	17207-GZ4-670	3445632
4	CASE, AIR CLEANER				1	17210-GZ4-670	3445640
5	NUT, AIR CLEANER CASE SETTING				1	17212-965-000	1402809
6	COVER, AIR CLEANER CASE				1	17217-GZ4-670	3445665
7	SPRING, AIR CLEANER CASE COVER				2	17223-GZ4-670	3445699
8	DUCT, AIR CLEANER IN				1	17240-GZ4-670	3445715
9	TUBE, AIR CLEANER CONNECTING				1	17253-GZ4-670	3445731
10	TANK, CATCH				1	17550-GZ4-670	3446077
11	TUBE, OVER FLOW				1	17551-GZ4-670	3446085
12	GUIDE, RR. BRAKE CABLE				1	45465-GZ4-670	3449626
13	BAND, AIR CLEANER CONNECTING TUBE (42)				1	90652-GH8-640	3134632
14	SCREW, PAN, 4X25				1	93500-04025-06	0912246
15	TUBE, FUEL, 5.3X45				1	95001-55045-40	0448662
16	TUBE, FUEL, 5.5X55				1	95001-55055-40	0487892
17	TUBE, FUEL, 5.3X75				1	95001-55075-40	3500196
18	TUBE, FUEL, 5.3X85				1	95001-55085-40	0448688
19	TUBE, FUEL, 5.3X225				1	95001-55225-40	3454048
20	CLIP B10, TUBE				10	95002-02100	0250985

CONTENTS

TITLE	GRID	PAGE
AIR CLEANER	C10	39
BATTERY	C10	38
BODY COVER	C3	25
CARBURETOR	B8	17
CAUTION LABEL	D4	51
CENTER COVER	C3	24
CRANKCASE	B6	13
CRANKSHAFT	B7	15
CYLINDER	B1	3
DRIVE FACE	B3	7
DRIVEN FACE	B4	9
EXHAUST MUFFLER	C11	41
FAN COVER	B1	2
FRAME BODY	D3	49
FRONT BRAKE PANEL	C6	30
FRONT COVER	C2	23
FRONT FORK	C4	27
FRONT WHEEL	C6	31
FUEL TANK	C8	35
GASKET KIT	B9	19
GENERATOR	B2	4
HANDLE COVER	C2	22
LEFT CRANKCASE COVER	B3	6
MARK	D5	52
OIL TANK	C9	37
PEDAL	C12	42
REAR BRAKE PANEL	C7	32
REAR CUSHION	D2	46
REAR FENDER	D2	47
REAR WHEEL	C7	33
SEAT	C8	34
STARTING MOTOR	B2	5
STEP	C12	43
SWING ARM	D1	45
SWITCH	C1	20
TOOLS	D4	50
TRANSMISSION	B5	11
WIRE HARNESS	D3	48