

1. Cleaning

- Remove the kick starter pedal.
- Remove the right crankcase cover, pull out the oil screen and wash in gasoline. (Fig. 5.13)

CAUTION:

Install the oil filter screen with the narrow tapered side toward the inside and the fin on the filter screen toward the bottom.

9. Air cleaner servicing

An air cleaner clogged with dust restricts the free passage of inlet air and result in power loss or drop in acceleration, therefore, to assure proper performance, periodic cleaning of the air cleaner should be performed.

1. Removal. (Fig. 5.14)

Refer to page 98~99.

2. Cleaning

- Tap the cleaner element lightly to loosen the dust and then blow dry compressed air from the inside or use a brush to remove the dust. (Fig. 5.15)

CAUTION:

- Air cleaner element is made of cellulose acetate and if distorted or damaged, it will permit dusts to enter engine cylinder and cause excessive cylinder wear.
- Oil or water will cause the element to become clogged and will result in lowered engine performance.

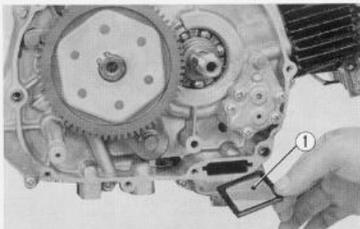


Fig. 5.13 Removing oil filter screen ① Oil filter screen

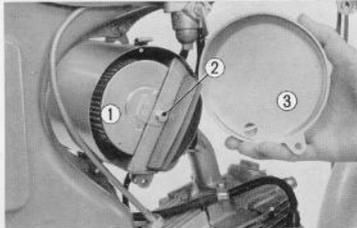


Fig. 5.14 Removing air cleaner
① Air cleaner ② 6 mm bolt ③ Air cleaner cover

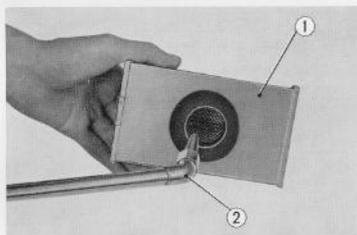


Fig. 5.15 Cleaning air cleaner element
① Air cleaner ② Air gun

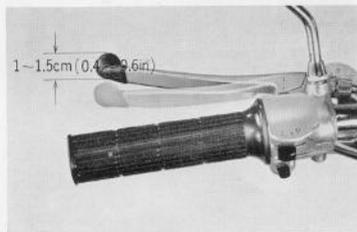


Fig. 5.16 Free play of clutch lever