


COOLING SYSTEM

THERMOSTAT REMOVAL/INSTALLATION

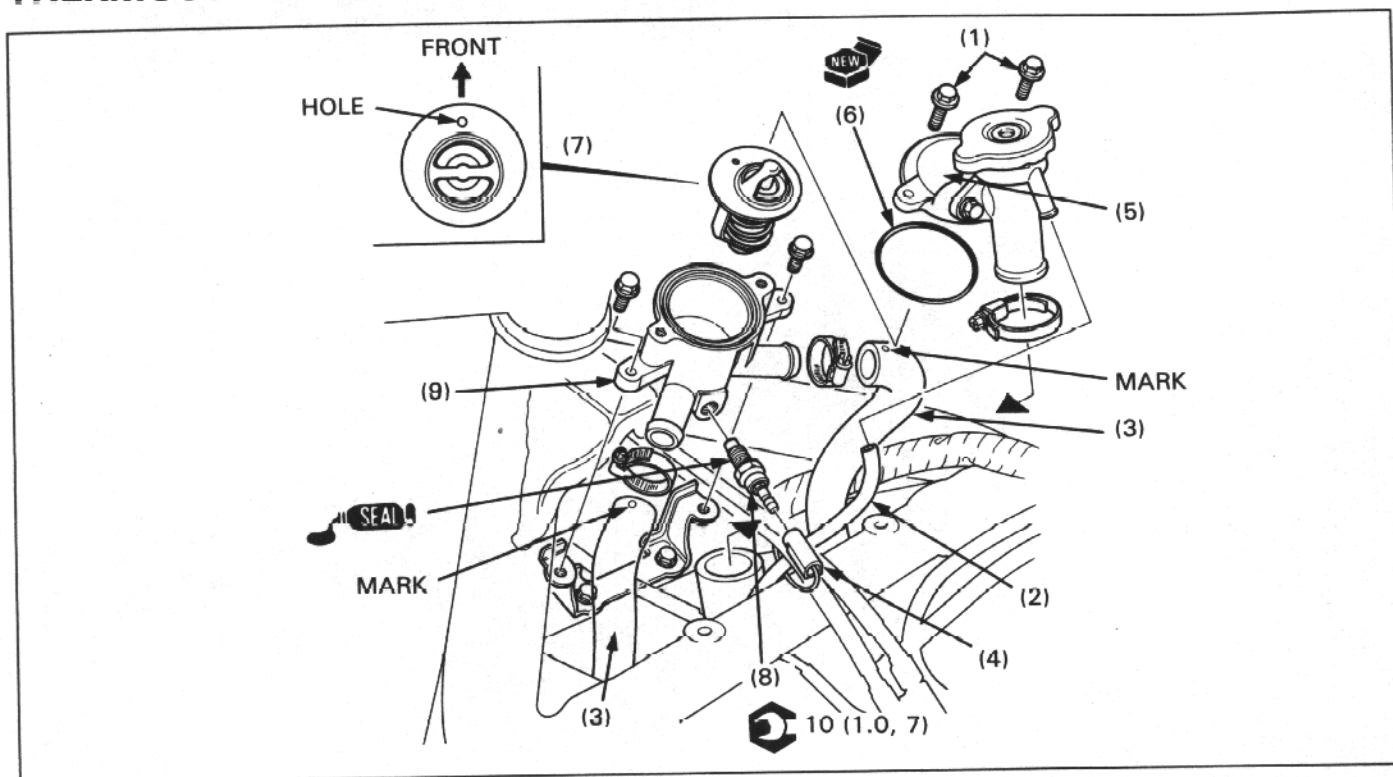

REQUISITE SERVICE

- Fuel tank removal/installation (page 2-4)
- Coolant draining (page 5-3)
- Coolant refill (section 5 of the Common Service Manual)
- Air cleaner case removal/installation (page 6-3)

PROCEDURE		Q'ty	REMARKS
REMOVAL ORDER			• Installation is in the reverse order of removal.
(1)	Thermostat cover mounting bolt	2	Install them with "O" marks facing up.
(2)	Siphon tube	1	
(3)	Radiator hose	2	
(4)	Thermo sensor connector	1	
(5)	Thermostat cover	1	
(6)	O-ring	1	Install the thermostat with its hole side forwards. At installation, apply sealant to the threads.
(7)	Thermostat	1	
(8)	Thermo sensor	1	
(9)	Thermostat housing	1	