

## REAR COWL


### REMOVAL/INSTALLATION

Remove the seat and side cover (page 2-2).

Remove the tail/brake light 3P connector.  
Remove the caps from the socket bolts.  
Remove the four socket bolts and grab rail.

Remove the two trim clips and socket bolts.  
Remove the rear cowl by pulling it back.

Installation is in the reverse order of removal.

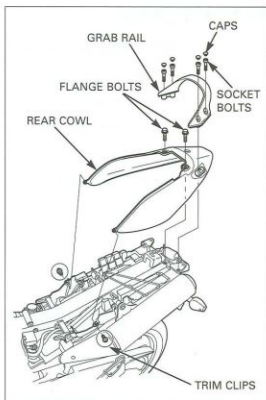

## FRONT FENDER

### REMOVAL/INSTALLATION

Remove the brake hose clamp bolts and reflectors.  
Remove the front fender mounting socket bolts/nuts and flange bolts.  
Remove the front fender.

Installation is in the reverse order of removal.

