


MAINTENANCE

Clean the air cleaner element using compressed air anytime it is excessively dirty or damaged.


Install the removed parts in the reverse order of removal.

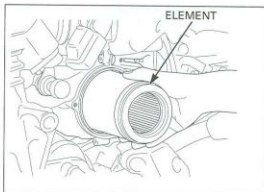

CRANKCASE BREATHER

Remove the side cover (page 2-2).

Disconnect and clean the drain tube.
Connect the drain tube.

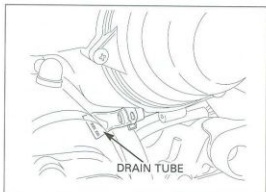

SPARK PLUG

REMOVAL

Clean around the spark plug bases with compressed air before removing, and be sure that no debris is allowed to enter the combustion chamber.

Open and support the front end of the fuel tank (page 3-4).

Remove the radiator from the frame boss by moving it to the right, then move the radiator forward (page 2-6).

Disconnect the ignition coil connectors.

Remove the spark plug using a spark plug wrench or an equivalent tool.



Inspect or replace as described in the maintenance schedule.

INSPECTION

Check the following and replace if necessary (recommended spark plug: page 3-2)

- Insulator for damage
- Electrodes for wear
- Burning condition, coloration

