

Refer to section 14 for shock absorber and swingarm service.



## REAR SUSPENSION ADJUSTMENT

### SPRING PRE-LOAD ADJUSTER

Spring preload can be adjusted by turning the adjuster using a pin spanner.

## NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-12).  
Check that all safety clips, hose clamps and cable stays are in place and properly secured.

## WHEELS/TIRES

### NOTICE

*Tire pressure should be checked when the tires are COLD.*

### RECOMMENDED TIRE PRESSURE AND TIRE SIZE:

		FRONT	REAR
Tire pressure kPa (kgf/cm <sup>2</sup> , psi)		250 (2.50, 36)	290 (2.90, 42)
Tire size		120/70 ZR 17 (58W)	180/55 ZR 17 (73W)
		120/70 ZR 17 M/C (58W)	180/55 ZR 17 M/C (73W)
Tire brand	Bridgestone	BT56F RADIAL N	BT56R RADIAL G
	Michelin	TX15	TX25

