


SYSTEM DIAGRAM

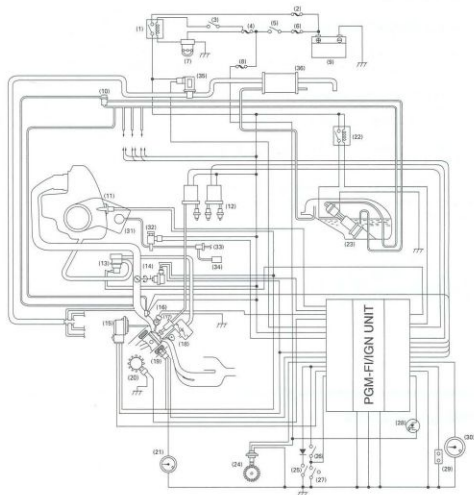

- (1) Engine stop relay
- (2) PGM-FI fuse (20A)
- (3) Engine stop switch
- (4) Sub-fuse (10A)
- (5) Ignition switch
- (6) Main fuse A (30A)
- (7) Bank angle sensor
- (8) Sub-fuse (10A)
- (9) Battery
- (10) Fuel Pressure regulator
- (11) IAT sensor
- (12) Ignition coil/spark plug
- (13) PAIR solenoid valve
- (14) TP sensor
- (15) MAP sensor
- (16) Injector
- (17) Cam pulse generator
- (18) PAIR check valve
- (19) ECT sensor

- (20) Ignition pulse generator
- (21) Water temperature
- (22) Fuel cut relay
- (23) Fuel pump
- (24) Vehicle speed sensor
- (25) Neutral switch
- (26) Clutch switch
- (27) Side stand switch
- (28) Malfunction indicator lamp (MIL)
- (29) Service check connector
- (30) Tachometer
- (31) Intake air duct control diaphragm
- (32) By-pass solenoid valve
- (33) One-way valve
- (34) Chamber
- (35) EVAP purge control solenoid valve (California type only)
- (36) EVAP canister (California type only)