 




Turn the ignition switch ON.
Measure the voltage at the test harness terminals (page 5-9).




Connection: B7 (+) - B1 (-)
Standard: 2.7 - 3.1 V (760 mm Hg/1,013 kPa)

Out of range → • Faulty MAP sensor

↓ Voltage exists

Start the engine.
Measure the voltage at the test harness terminals (page 5-9).

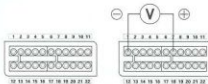

Connection: B7 (+) - B1 (-)
Standard: 2.7 V maximum

Out of range → • Faulty MAP sensor

Voltage exists → • Replace the ECM with a new one, and inspect it again