 


Check for continuity between the No.3 injector and ground.

 


Connection:
Black/White (+) - Ground (-)
Standard: No continuity

Continuity → • Faulty No.3 injector

No continuity

Turn the ignition switch ON.
Measure the voltage between the No.3 injector connector of the wire harness side and ground.



Connection:
Black/White (+) - Ground (-)
Standard: Battery voltage

Out of range → • Open or short circuit in Black/White wire

Voltage exists

Turn the ignition switch OFF.
Connect the No.3 injector connector.

