


### VALVE LIFTER BORE

Inspect each valve lifter bore for scratches or abnormal wear.

Measure each valve lifter bore I.D.

**SERVICE LIMIT: 26.04 mm (1.025 in)**

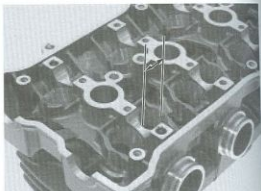


### VALVE LIFTER

Inspect each valve lifter for scratches or abnormal wear.

Measure each valve lifter O.D.

**SERVICE LIMIT: 25.97 mm (1.022 in)**

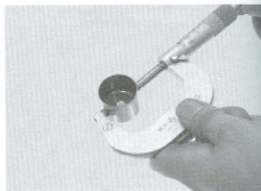


### VALVE SPRING

Measure the the valve spring free length.

**SERVICE LIMITS: 40.8 mm (1.578 in)**

Replace the springs if they are shorter than the service limits.

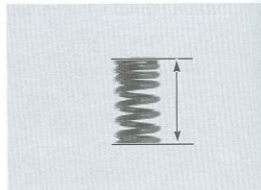

### CAM CHAIN TENSIONER/CAM CHAIN GUIDE

Inspect the cam chain tensioner and cam chain guide for excessive wear or damage, replace if necessary.

