


ALTERNATOR COVER REMOVAL

Remove the left side cover (page 2-2).

Disconnect the alternator 3P connector.

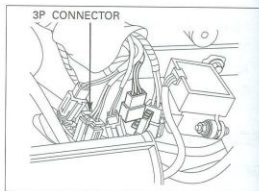

The alternator cover (stator) is magnetically attached to the flywheel, be careful during removal.

Remove the alternator cover SH bolts and alternator cover.

The engine oil will run out when the alternator cover is removed. Set a clean oil pan under the engine and add the recommended oil to the specified level after installation.



Remove the gasket and dowel pin.



STATOR

REMOVAL

Remove the alternator wire grommet from the alternator cover.

Remove the socket bolt and stator wire clamp.

Remove the socket bolts and stator.

